Manual de instrucciones

NAMASTE

RELOJ NAMASTE Movimiento Miyota 2115

BATERÍA: 377 / SR626SW

A) ESFERA

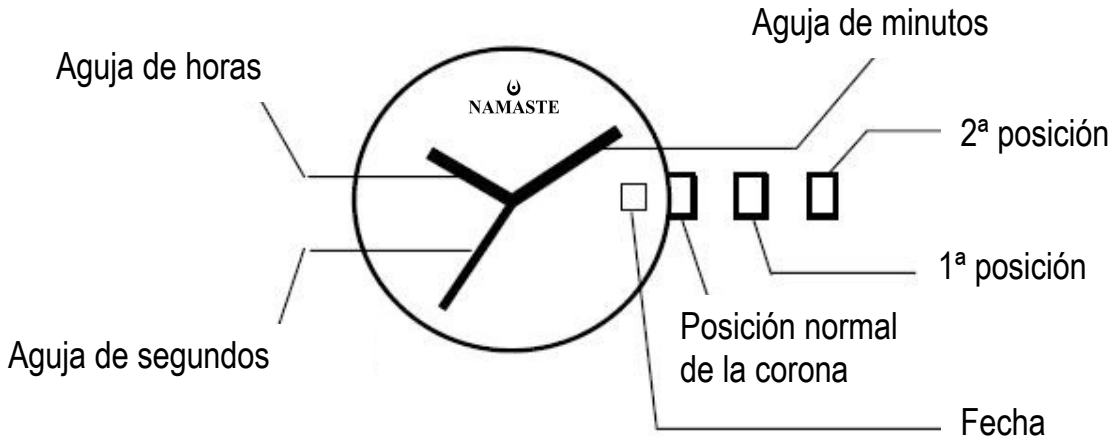

B) AJUSTE DE LA HORA

1. Tire de la corona hasta la 2 ª posición.
2. Gire la corona para ajustar las agujas de hora y minutos.
3. Cuando la corona se empuja de nuevo a la posición normal, la aguja de los segundos comienza a moverse.

C) AJUSTE DE LA FECHA

1. Tire de la corona hasta la 1 ª posición.
2. Gire la corona hacia la izquierda para ajustar la fecha.

Importante: Si se ajusta la fecha entre las horas de las 9:00 PM y 1:00 AM, la fecha puede que no cambie al día siguiente.

3. Después de la fecha se ha fijado, colocar la corona a la posición normal.

Manual de instrucciones

NAMASTE

NAMASTE WATCH Movement Miyota 2115

BATTERY: 377 / SR626SW

A)DISPLAY

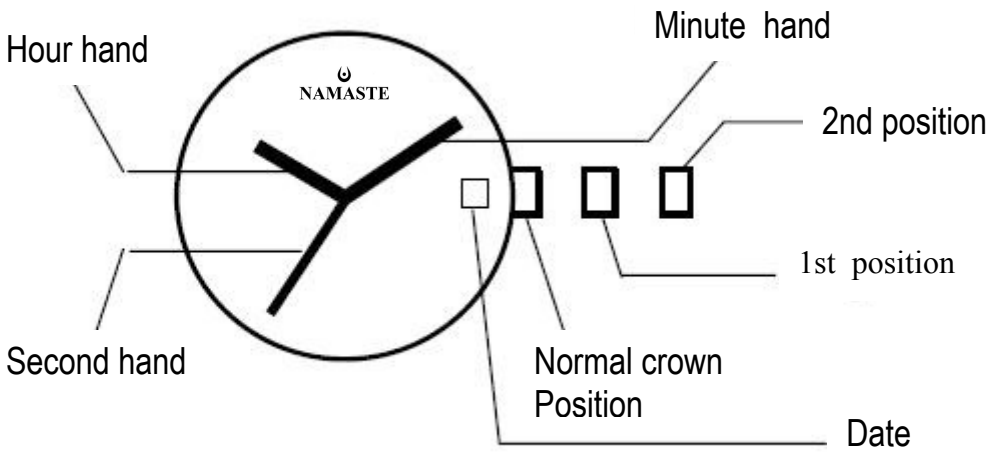

B) SETTING THE TIME.

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position,
second hand begins to run.

C) SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set the date.

Important: If the date is set between the hours of around 9:00 PM y 1:00 AM, the date may not change the following day.

3. After the date has been set, push the crown back to the normal position.